

# BASS SLAMMER™

## HC10

**Enclosure Volume: 1.3 Cubic Foot, Sealed**

**READ ALL DIRECTIONS CAREFULLY BEFORE BEGINNING**


**MOUNTING LOCATION:** The enclosure mounts in trunk of two or four door Civic on passenger side.

**TOOLS FOR INSTALLATION:**

Powered Screwdriver

**INSTALLATION:** Follow the steps below

1. Place gasket provided around woofer hole cutout. Connect black wire to the negative side of woofer and red to the positive side. Using screws provided install woofer into enclosure, making sure not to overtighten screws to avoid stripping.
2. Place enclosure in trunk of vehicle, with woofer firing towards the rear of the vehicle on passenger side.
3. Make speaker connections to the enclosure from the amplifier, loosen terminals knobs (a 13-mm nut driver can be used.) Connect speaker wires from amplifier to enclosure, positive to the red terminal knob and negative to the black terminal knob.
4. Using screws provided, install the enclosure into vehicle as shown below.

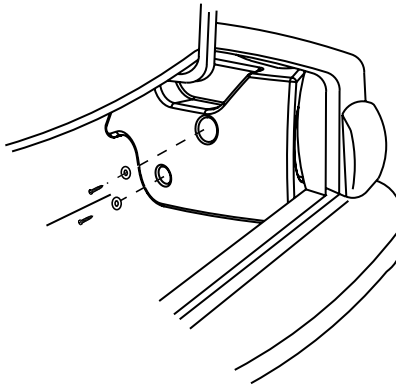


**FACTORY SPEAKER WIRE COLORS**

Wire colors for the rear speakers are left side, blue/yellow (positive), gray/white (negative). Right side, red/yellow (positive), brown/white (negative).

*Although every effort has been made to assure proper wiring color, Mitek is not responsible for any changes made by the vehicle manufacturer which sometime occur. If wiring colors do not match then physical verification is required. These instructions are guidelines only and in no way are intended to replace a professional installation. As always before screwing and drilling check to make sure you will not damage wires, hoses or cause damage to the vehicle.*

## MAXIMUM ENCLOSURE MOUNTING SPECIFICATIONS

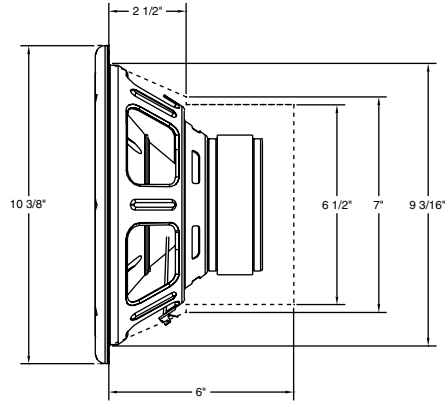

**MAXIMIZE YOUR SYSTEM'S  
PERFORMANCE**

[streetwires.com](http://streetwires.com)

**STREETWIRES®**